



CMR Electrical Ltd
Bolton House
Five Chimneys Lane
Hadlow Down
East Sussex
TN22 4DX
Tel: 01825 733600

RWM

Water Leak Detection Sensor

Installation and Operation

Manual




Installation

The detection sensor is susceptible to damage and should not be fitted to areas where it is likely to be damaged or walked on.



Sensor wiring

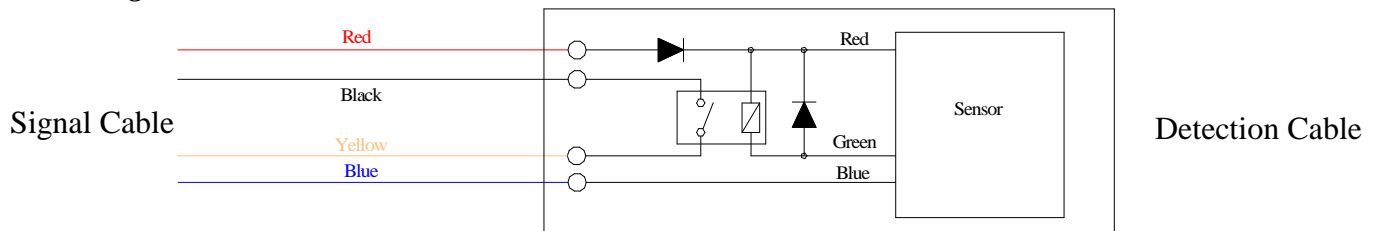

Connections

Red Wire = 12-24VAC live or 13-24VDC +
Black Wire = Volt free Contact common
Yellow Wire = Volt Free Contact Normally Open, Close in alarm
Blue Wire = 12 - 24VAC Neutral or 13 - 24VDC negative

The signal cable should be terminated between the sensor and the main Alarm/BMS in the following manner.

Main Controller terminal number	Signal wire colour
+VDC/AC	Red
0VDC/AC	Blue
Contact N/O	Yellow
Contact N/O	Black

Sensitivity adjustment

To increase the sensitivity of the cable turn the potentiometer CLOCKWISE, to de-crease the sensitivity turn ANTICLOCKWISE.

